
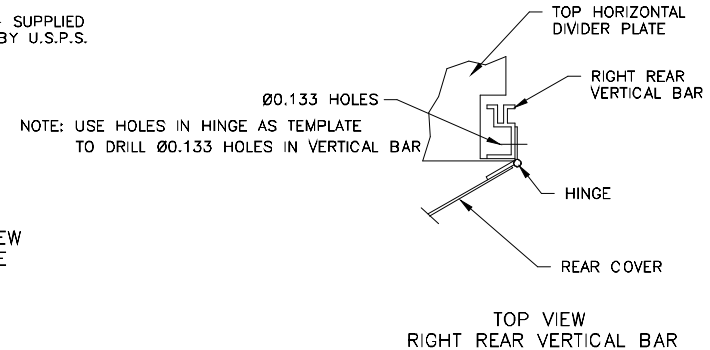


HINGED AND LOCKING REAR COVER INSTALLATION PROCEDURE FOR HORIZONTAL BOXES

LOCK BRACKET INSTALLATION INSTRUCTIONS:

1. CLOSE REAR COVER AND IDENTIFY THE MAIL BOX OPENING THAT IS BEHIND THE REAR COVER LOCK.
2. USING THE INSERT AS A TEMPLATE, DRILL (1) Ø.133 HOLE FOR POP RIVET IN THE HORIZONTAL DIVIDER PLATE AT THE LOCATION SHOWN, IN THE MAILBOX OPENING.
3. FASTEN INSERT TO DIVIDER PLATE WITH RIVET

(4W X 7H HORIZONTAL BOX SHOWN)

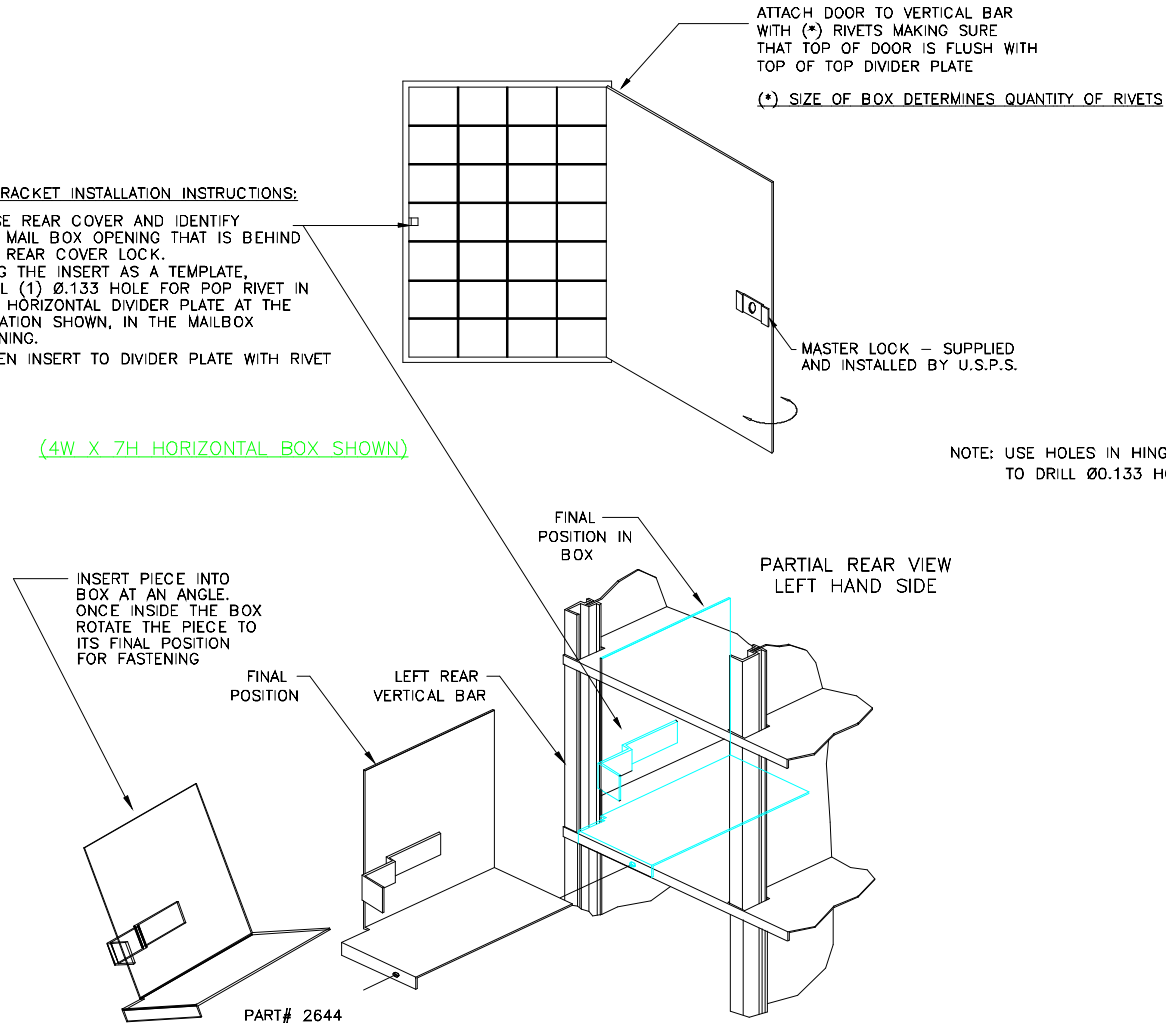

AUTH AF FLORENCE
MANUFACTURING COMPANY
5935 CORPORATE DRIVE
MANHATTAN KANSAS 66503

CS5076

JCP 2/27/04