

Installation Manual Pillar Pedestal Cover

vogue™ cluster box
accessories

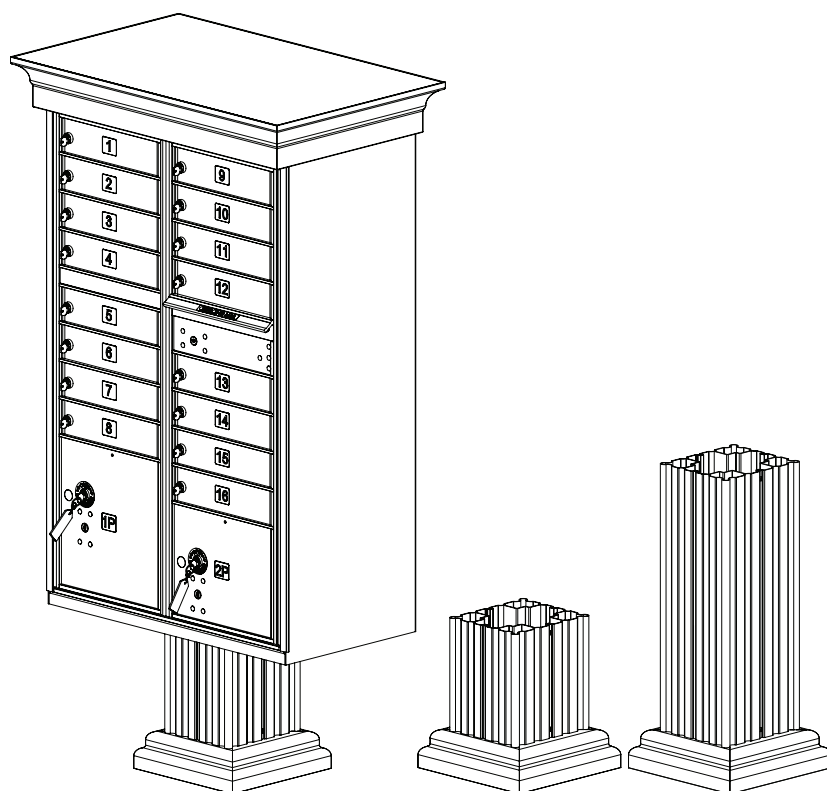


TABLE OF CONTENTS

Description	Page
Multi-unit Pad Specification	2
Pedestal Cover Parts	3
Pillar Pedestal Lower Base Cover Installation	4
Pillar Pedestal Vertical Cover Installation	6


AF FLORENCE
manufacturing company

5935 Corporate Drive • Manhattan, KS 66503
www.auth-florence.com • (800) 275-1747

A GIBRALTAR INDUSTRIES COMPANY

**vogue™ cluster box
accessories**

Multi-unit Pad Specification

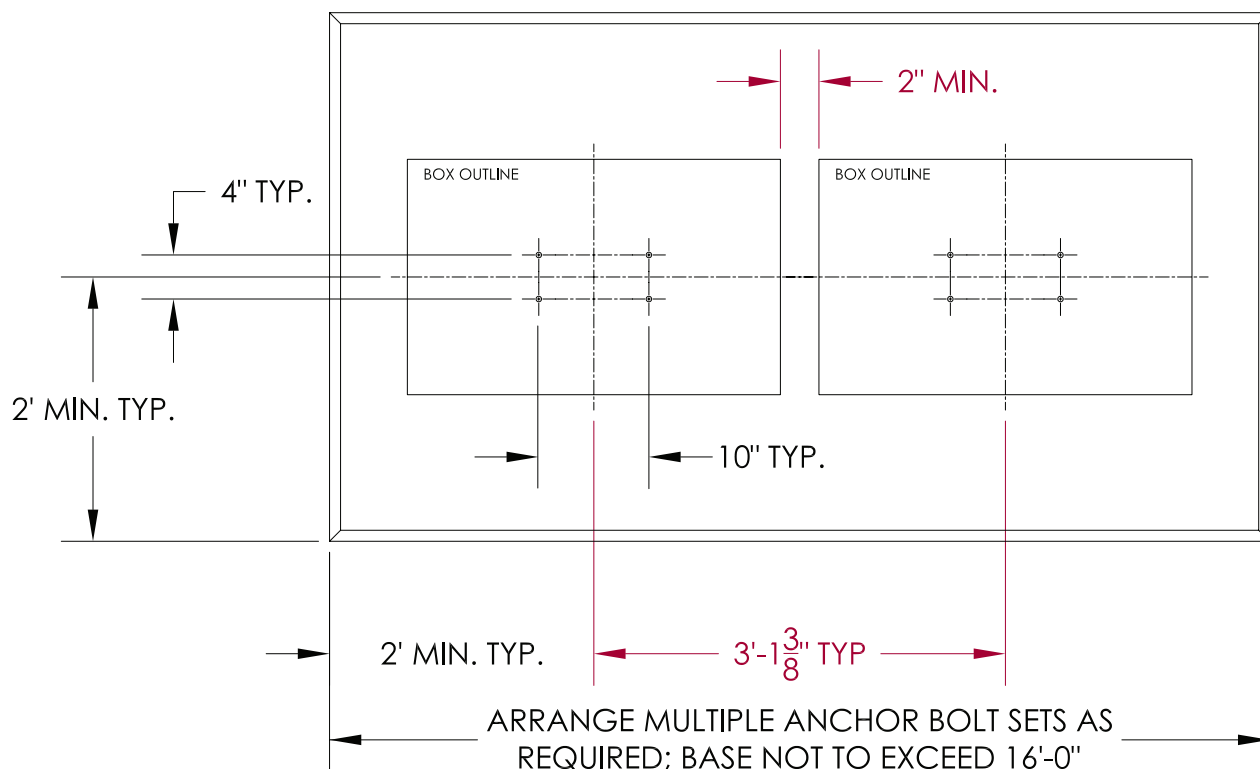

The Multi-pad Specification above is being furnished in the event you are installing the Pillar Pedestal Cover in combination with the Florence Crown Molding Cap.




Caution

Due to the design of the Crown Molding Cap you cannot use the standard spacing for the mounting the cluster box units into the concrete pad because the caps will interfere with each other. The cabinets must be a minimum of 2" apart. Please use the chart above to ensure proper spacing.

All other requirements for mounting the cluster box unit are in the cluster box installation manual, included with your Florence vital™ 1570 series cluster box unit.

Technical documents are downloadable from www.auth-florence.com

Pedestal Cover Parts

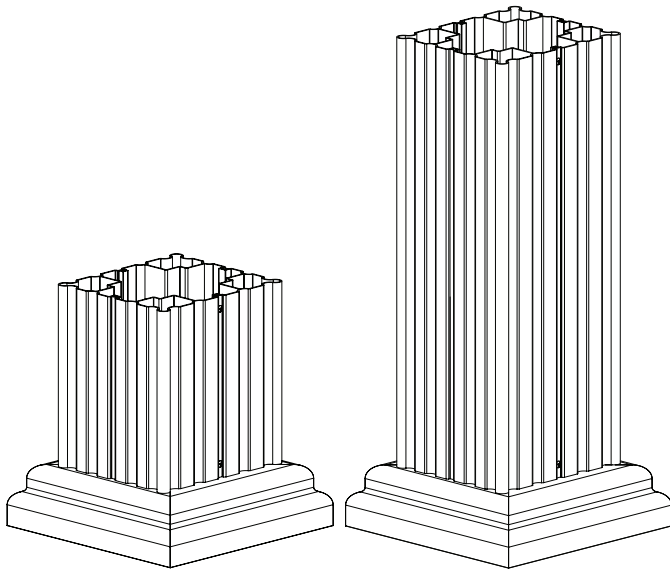


VOGUEP114
Pillar Pedestal
for
1570-16 & 13 CBU


VOGUEP128
Pillar Pedestal
for
1570-8 & 12 CBU

Pedestal Cover		
Part #	Description	Qty
91532*	Lower Base Cover	1
91681*	Lower Base Cover Plate	1
91687	#8-32 x 3/8" Flat Head Screw	4
91538*	Tall Vertical Cover Half	2
91539*	Short Vertical Cover Half	2
91690	#10-32 x 3/8" Phillips Screw	4


*For replacement parts specify finish and
cluster box type

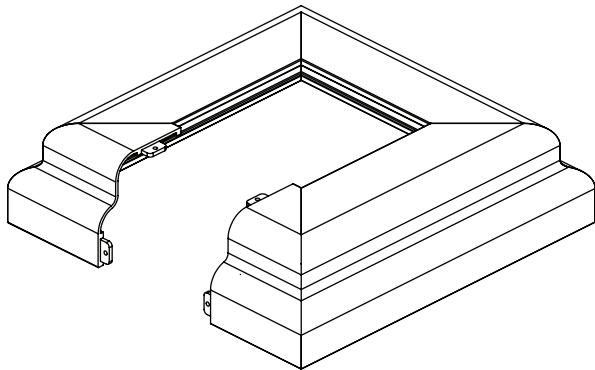

91532 - Lower Base Cover

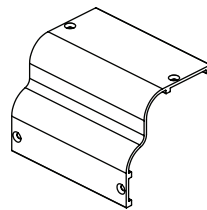


91681 - Lower Base Cover Plate

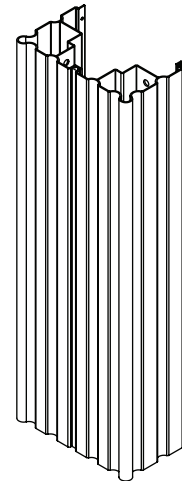

Varies - Vertical Cover Half



91687 - #8-32 x 3/8" Flat Head Screw



91690 #10-32 x 3/8" Phillips Screw

Hardware shown as actual size

Pillar Pedestal Lower Base Cover Installation

Complete this after installation of the cluster box unit.


CAUTION: Lower cover cannot be properly installed if the pedestal mounting bolts are too high. Cut anchors down to size while still providing adequate thread engagement for CBU.

- 1.** Install 91532 lower base cover over the pedestal with the open area to the rear of the cluster box unit.
- 2.** Align 91681 lower base cover plate over the tabs on the 91532 base lower cover.
- 3.** Secure with four (4) 91687 #8-32 x 3/8" flat head screws to the 91681 lower base cover plate. Hand tighten.

	PART # DESCRIPTION	
	PART #	DESCRIPTION
REQUIRED TOOLS	91532	Lower Base Cover
	91681	Lower Base Cover Plate
	91687	#10-32 x 3/8" Flat Head Screw
#2 Phillips Head Screwdriver/Bit		

Pillar Pedestal Lower Base Cover Installation

Install from **front** of cluster box
unit, so lower base cover plate
is in the rear

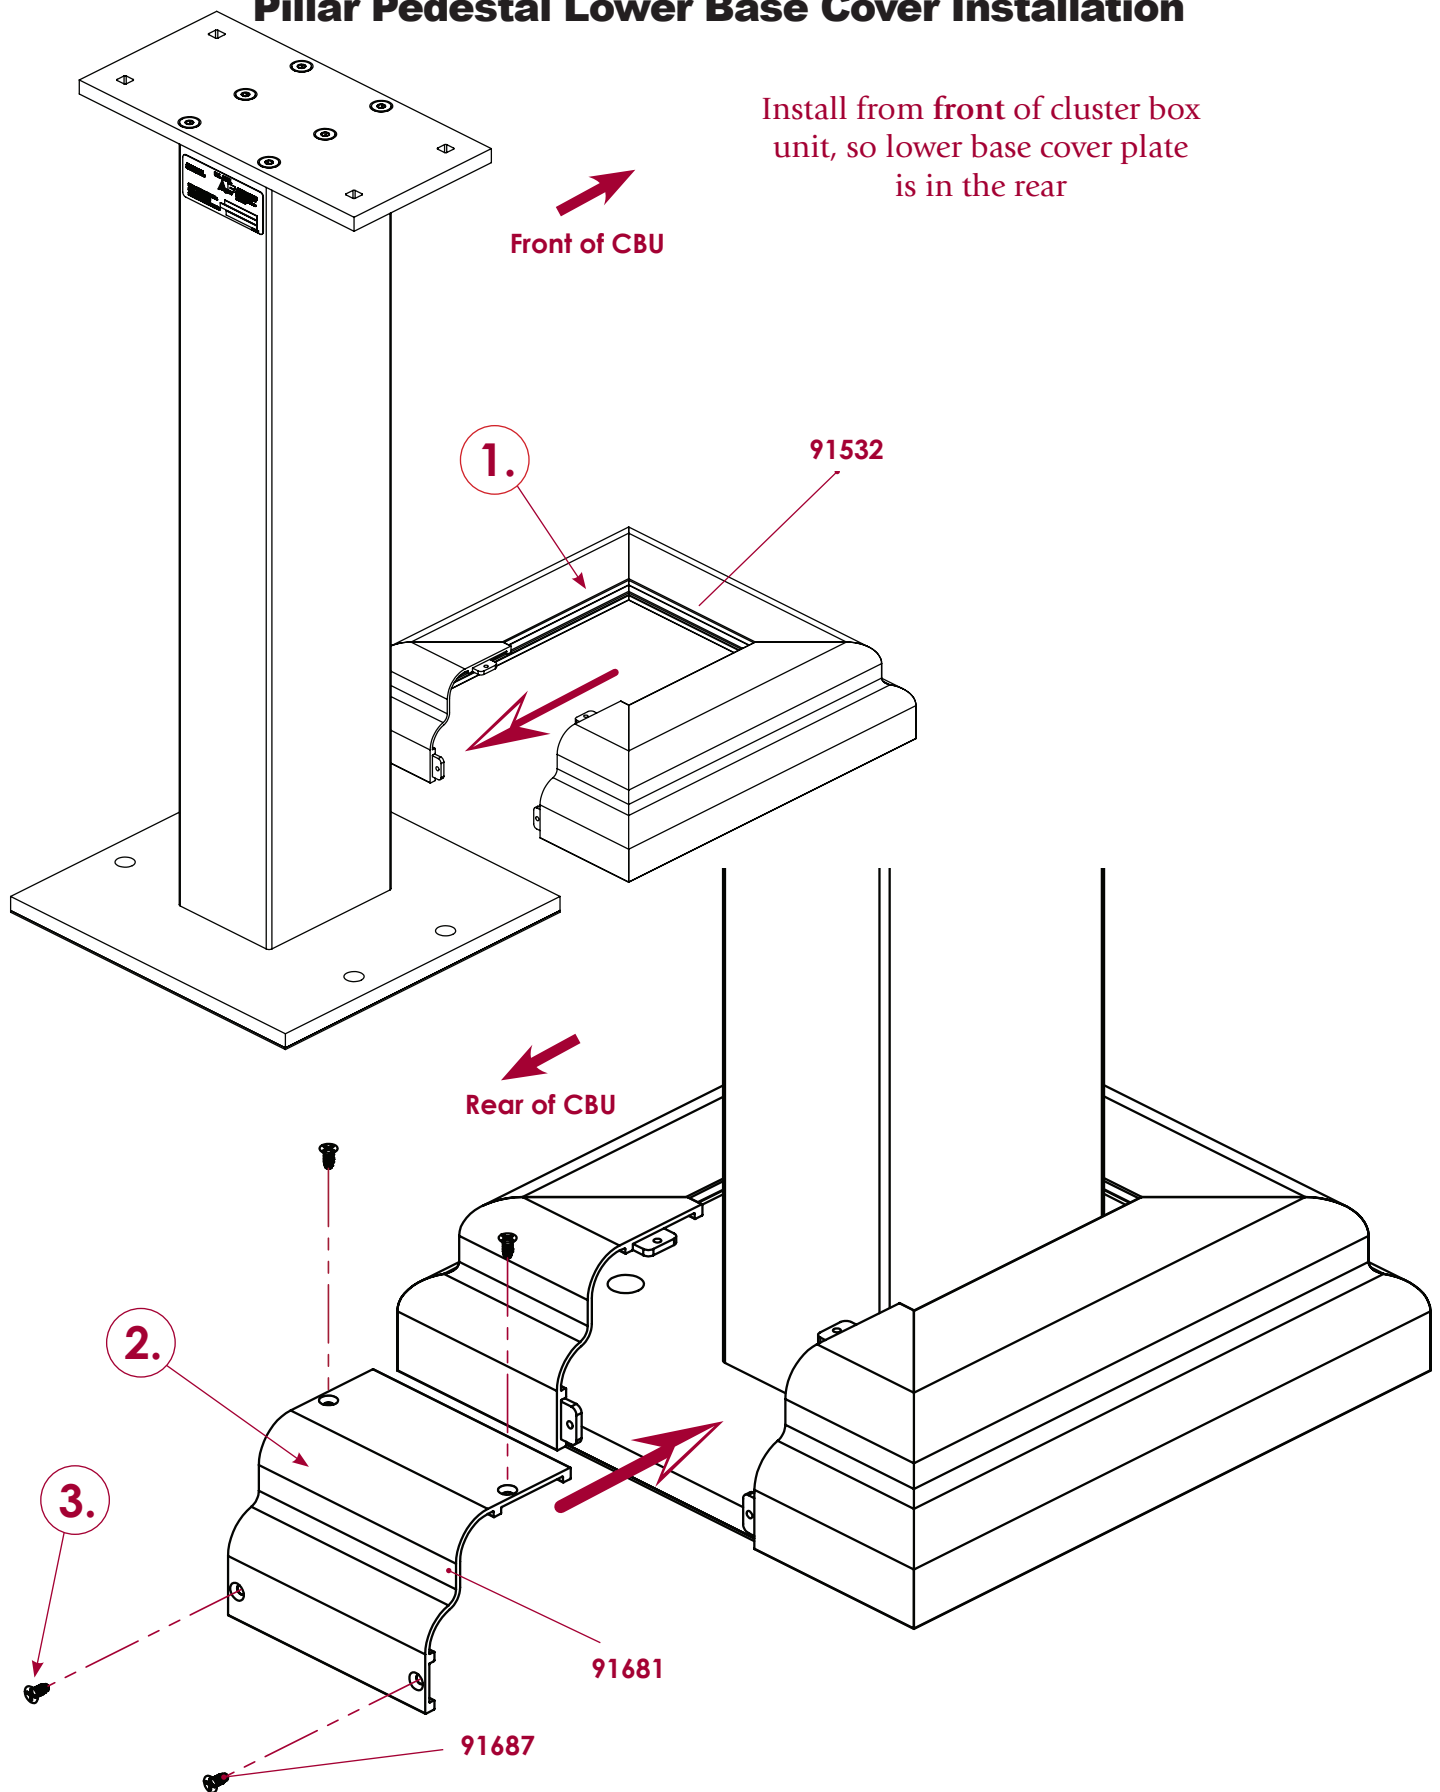

Pillar Pedestal Vertical Base Installation

1. Align two vertical cover halves, one from front and one from the rear of the CBU, ensuring proper alignment (see image on page).
2. Secure with four (4) 91690 #10-32 x 3/8" phillips screws from the sides. Hand tighten.

REQUIRED TOOLS	PART #	DESCRIPTION
	Varies	Vertical Cover Half
#2 Phillips Head Screwdriver/Bit	91690	#10-32 X 3/8" Phillips Screw

Pillar Pedestal Vertical Base Installation

